Protect Your Source
Secure Your Data

D0204

Installation guide

Extra Speed Storage with USB 3.0

Thecus®, Creator in Storage

www.thecus.com

V1.2

Protect Your Source
Secure Your Data

D0204

RAID 0, 1, Large

USB3.0
Speed: 5Gbps = USB2.0 × 10

Hot swap
Support SSD

Reset Button

Thecus®, Creator in Storage

www.thecus.com

Installation Procedure :

1. Hard drive installation and cable connection setup :
   a. Open 2.5” HDD trays and install two HDDs.

   b. Connect USB3.0 cable to USB port on D0204 and the other end to your PC/Notebook, connect power cord then power ON.

2. Start Thecus D0204 RAID Manager
   Insert the installation CD into your CD-ROM drive.
   The RAID Manager will launch automatically.

3. D0204 RAID Configure:
   a. Under Basic mode, please select desired RAID configuration (RAID 0/1/Large).

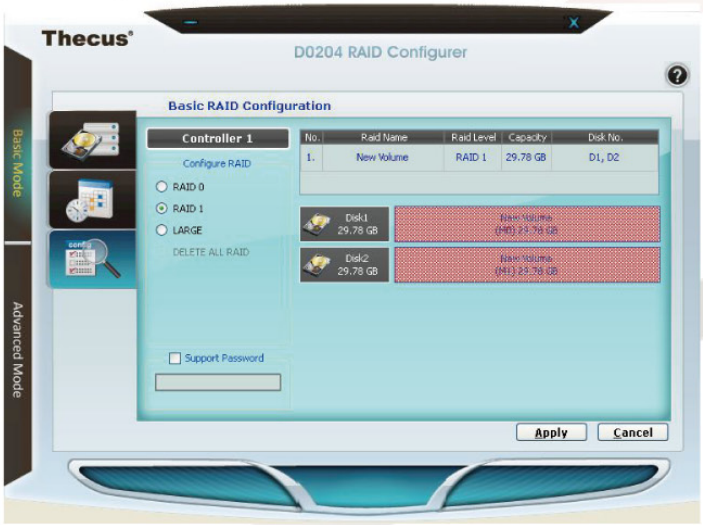

   b. Go to windows disk manager, and then initialize disk and create new partition for D0204.

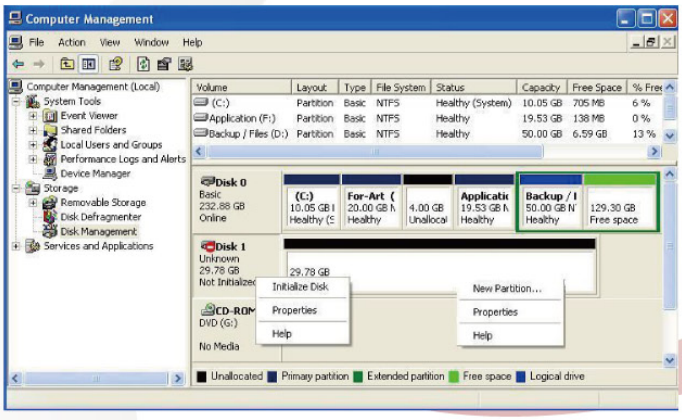

4. Once configured Successfully, D0204 will appear under “ My Computer”.

5. Please be aware that when the unit is set at "clear" mode, pressing the "reset" button or rebooting the unit will cause all data to be destroyed.

6. To remove RAID volume on Thecus D0204:
   a. Rotate the RAID switch to point to “clear”.
   b. Press and hold the “Reset” button for 2seconds.
   * all data will be destroyed if above procedure is performed.

7. To setup Thecus RAID mode on D0204 :
   a. Rotate the RAID switch to point to the desired RAID mode.
   b. Press and hold the “Reset” button for 2seconds.
   * D0204 will begin creating RAID volume.

Product Specifications

Item	Specification
Disk interface	2.5” SATA x2 via backplane
LCD indicator	Power On LED (Blue) HDD1 LED Activity (Green) / Rebuild (Red) HDD2 LED Activity (Green) / Rebuild (Red) USB 3.0 Activity LED (Green)
Buttons	Power button (Front panel) Reset button (Back panel) RAID Type selector (Back panel)
USB Interface	USB 3.0 Target port A-type x1 (Back panel)
Fan	Dock fan
Power Supply	15W External power adaptor
Chassis	Plastic chassis
Environment	Temperature : 5C to 40 C Humidity : 0 ~ 80 % R.H. (Non-condensing)
Dimension	86mm x 55.3mm x 132mm
RAID Modes	RAID 0, 1 and Large
Auto-Rebuild	Supported
Hot-Swap	Supported
RAID Manager	MS Windows Setup Wizard, 2000/7/XP/2003/Vista .

Copyright© 2010 Thecus Technology Corp. All rights reserved.
Thecus and other names of Thecus products are trademarks or registered trademark of Thecus Technology Corp. Other products and company names mentioned herein are trademarks of their respective companies.
For more information or on-line resources, please visit http://www.thecus.com.